

## For More Information

The complete schematic and user's guide for the PICDEM PIC18 Explorer Board, as well as the data sheet for the PIC18F47J13 family of microcontrollers are available on the Microchip web site: <http://www.microchip.com/PIC18J>

### Americas

Atlanta - 678-957-9614  
Boston - 774-760-0087  
Chicago - 630-285-0071  
Cleveland - 216-447-0464  
Dallas - 972-818-7423  
Detroit - 248-538-2250  
Kokomo - 765-864-8360  
Los Angeles - 949-462-9523  
Phoenix - 480-792-7200  
Santa Clara - 408-961-6444  
Toronto - 905-673-0699

### Asia/Pacific

Australia - Sydney - 61-2-9868-6733  
China - Beijing - 86-10-8528-2100  
China - Chengdu - 86-28-8665-5511  
China - Chongqing - 86-23-8980-9588  
China - Hong Kong SAR - 852-2401-1200  
China - Nanjing - 86-25-8473-2460  
China - Qingdao - 86-532-8502-7355  
China - Shanghai - 86-21-5407-5533  
China - Shenyang - 86-24-2334-2829  
China - Shenzhen - 86-755-8203-2660  
China - Wuhan - 86-27-5980-5300  
China - Xiamen - 86-592-2388138  
China - Xian - 86-29-8833-7252  
China - Zhuhai - 86-756-3210040  
India - Bangalore - 91-80-3090-4444  
India - New Delhi - 91-11-4160-8631  
India - Pune - 91-20-2566-1512  
Japan - Yokohama - 81-45-471-6166  
Korea - Daegu - 82-53-744-4301  
Korea - Seoul - 82-2-554-7200  
Malaysia - Kuala Lumpur - 60-3-6201-9857  
Malaysia - Penang - 60-4-227-8870  
Philippines - Manila - 63-2-634-9065  
Singapore - 65-6334-8870  
Taiwan - Hsin Chu - 886-3-6578-300  
Taiwan - Kaohsiung - 886-7-536-4818  
Taiwan - Taipei - 886-2-2500-6610  
Thailand - Bangkok - 66-2-694-1351

### Europe

Austria - Weis - 43-7242-2244-39  
Denmark - Copenhagen - 45-4450-2828  
France - Paris - 33-1-69-53-63-20  
Germany - Munich - 49-89-627-144-0  
Italy - Milan - 39-0331-742611  
Netherlands - Drunen - 31-416-690399  
Spain - Madrid - 34-91-708-08-90  
UK - Wokingham - 44-118-921-5869

12/30/09



**MICROCHIP**

Microchip Technology Inc. • 2355 West Chandler Blvd. • Chandler, AZ 85224-6199  
[www.microchip.com](http://www.microchip.com)

The Microchip name and logo and the Microchip logo are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries. PICDEM is a trademark of Microchip Technology Incorporated in the U.S.A. and other countries. All other trademarks mentioned herein are property of their respective companies. © 2010, Microchip Technology Incorporated, Printed in the U.S.A. All Rights Reserved. 1/10

DS51893A



## PIC18F47J13 Plug-in Module for PICDEM™ PIC18 Explorer Board

### Overview

The PIC18F47J13 Plug-in Module (PIM) is an accessory to the PICDEM™ PIC18 Explorer Board that allows users to easily experiment with the PIC18F47J13 family of microcontrollers. PIC18F47J13 is the superset member of the family and this PIM can be used to evaluate and develop with the PIC18F47J13 and PIC18F46J13 products. The PIM takes the place of the on-board PIC18F8722 device, and changes the output of the voltage regulator on the board to the proper voltage level for these parts. This enables users to quickly evaluate the new PIC18FJ Flash devices without having to buy a completely new demo board.

### Getting Started with the PIM

1. Make sure the on-board PIC18F8722 is programmed to allow the  $\overline{\text{MCLR}}$  Reset pin to function as a Reset pin. If the MCLR is configured to be used for general purpose I/O, the on-board PIC18F8722 may interfere with PIM usage, even when the board is switched to ICE mode.
2. Verify that the PICDEM PIC18 Explorer Board is not powered.
3. Set switch, S4, to the "ICE" position. This will hold the on-board PIC18F8722 in Reset, allowing the PIM to function instead.
4. Line up the PIM so its 3-pin female header aligns with the 3-pin riser on the PICDEM PIC18 Explorer Board, then plug the PIM into the demo board.
5. Apply power to the demo board. Be sure that VDD is correct for the device being used (3.3V for PIC18F47J13). If it is not correct, disconnect power and check that the 3-pin female header is aligned properly with the demo board's 3-pin riser.

### Changes to PICDEM PIC18 Explorer Board Configuration

The difference of available I/O pins between the PICDEM PIC18 Explorer Board's PIC18F8722 device and the PIM's PIC18F47J13 device causes some changes in the operation of the PICDEM PIC18 Explorer Board.

1. Most I/O lines connected to the PICDEM PIC18 Explorer Board's PICtail connector, J3/J5/J7/J11 silkscreen, will map 1:1 with PIC18F47J13 I/O pins.
2. Port I/O pins RHx, RGx, RFx, RJx, RE3 through RE7 and RA4 will be left unconnected because these pins do not exist on the PIC18F47J13 devices.
3. Because RF6 is not implemented on PIC18F47J13 devices, the MCP23S17 I/O expander Reset signal can not be driven by the PIM example code unless a jumper wire is connected between RB5 and RF6 on the PIC18 Explorer Board's female headers. The example code should still work fine using power-off/Power-on Reset, even without the jumper.

### Bootloader Firmware


This PIM comes preprogrammed with firmware from the "High-Speed Serial Bootloader for PIC16 and PIC18 Devices" (AN1310), which can be used to reprogram the device without requiring a dedicated PIC® MCU programmer. The host software installation package and AN1310 application note documentation may be downloaded from the Microchip web site.

### Demonstration Firmware

Additionally, the PIM is programmed with firmware demonstrating basic features on the PIC18 Explorer Board. The source for the PIC18F47J13 PIM demo code may be downloaded from the Microchip web site.

# PIC18F47J13 Plug-in Module for PICDEM™ PIC18 Explorer Board

## Board Schematic

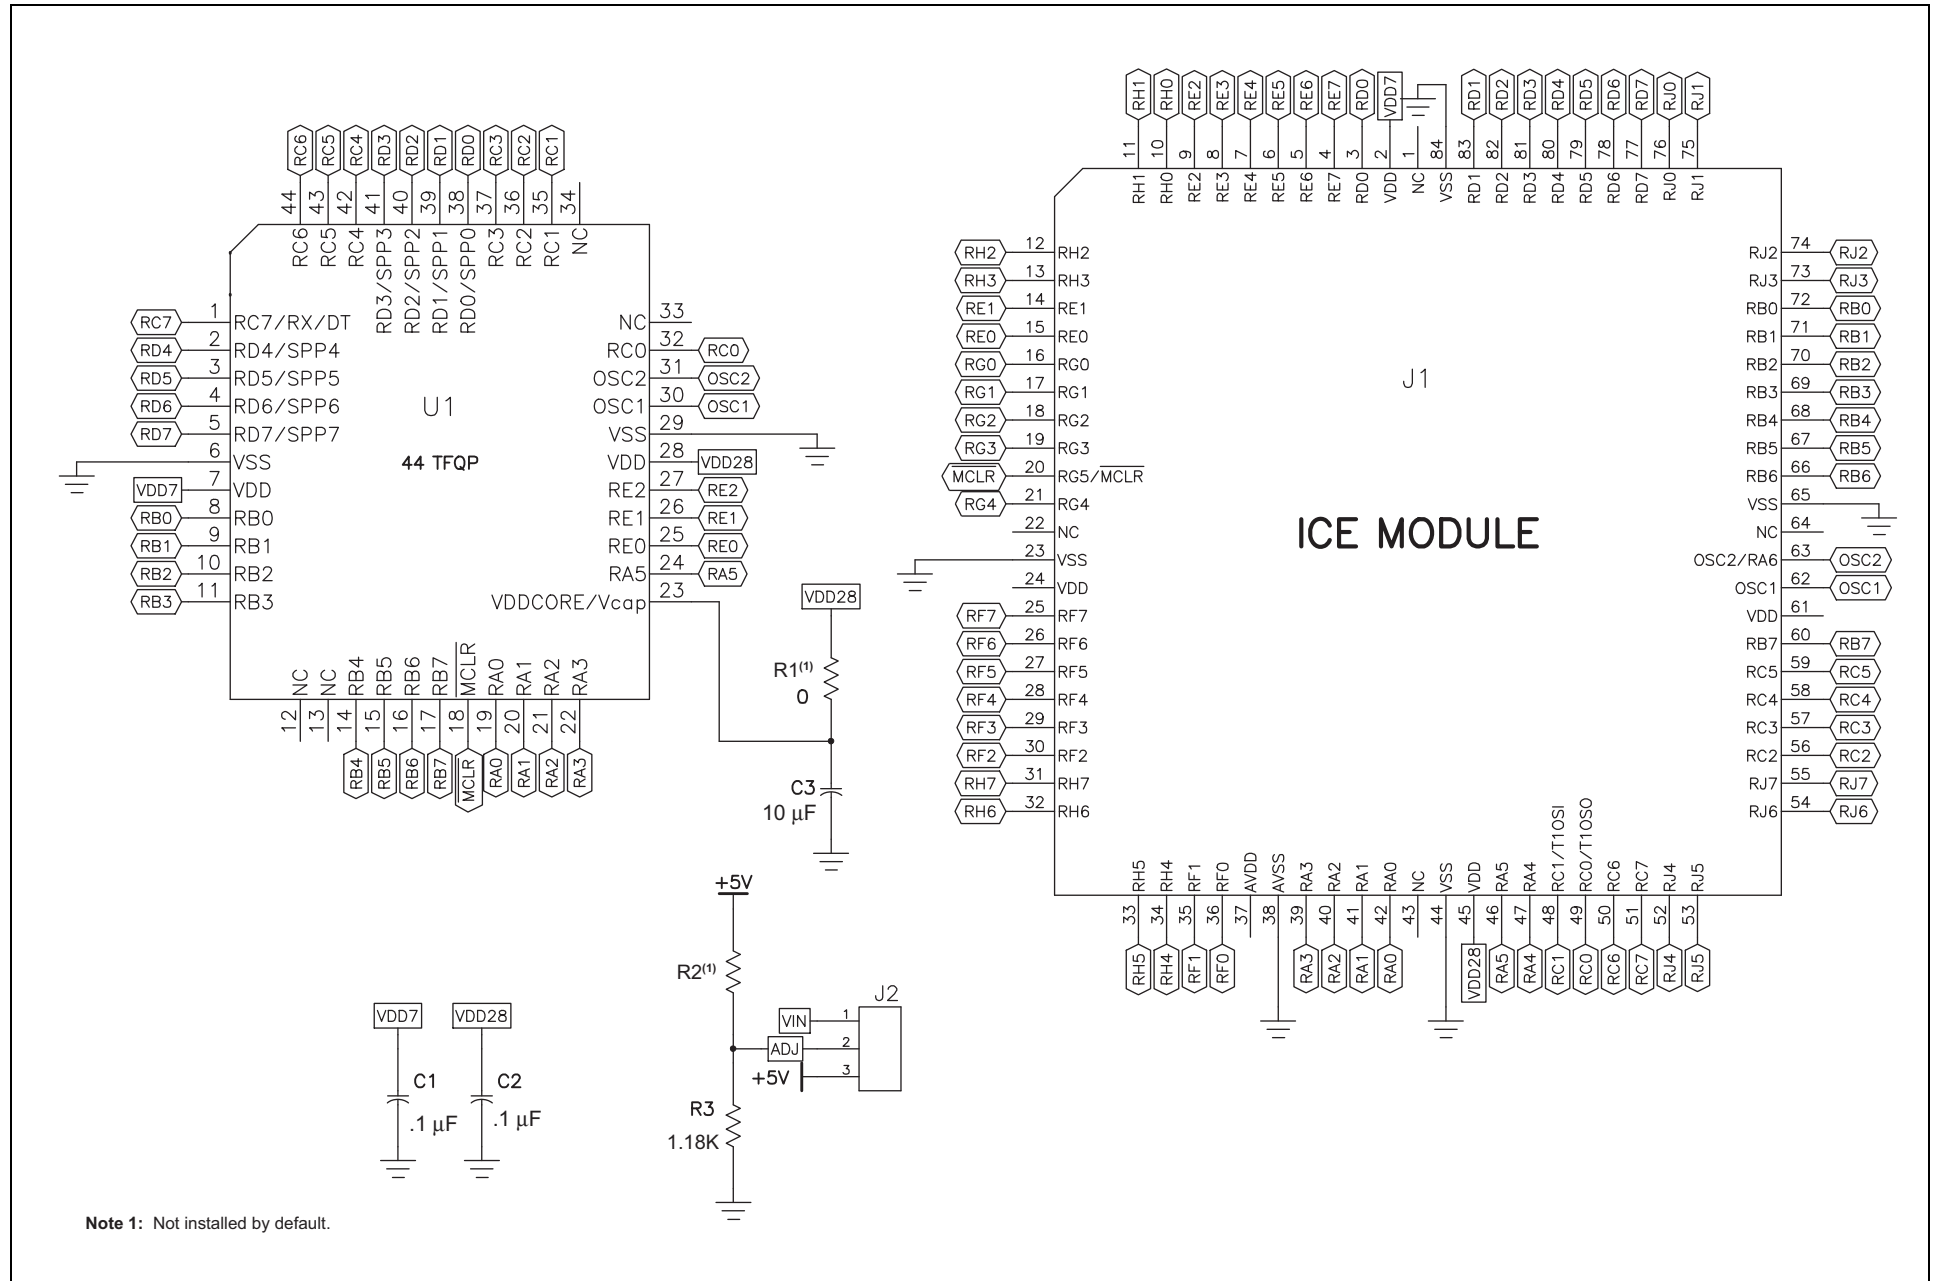

Note 1: Not installed by default.